Installation and Assembly - Projector Adapter Plate

Models: PAP-SANYO-ST1, PAP-SANYO-ST1-S, PAP-SANYO-ST1-W

Before you start check the parts list below to make sure all of the parts shown are included.

IMPORTANT! Read entire instruction sheet before you start installation and assembly.

⚠ WARNING

- Installer must verify that the supporting surface will safely support the combined weight of all attached equipment and hardware.

Parts List		SANYO-ST1	SANYO-ST1-S	SANYO-ST1-W
	Description	Qty. Part #	Part #	Part #
A	adapter plate	1 055-1878	055-4878	055-2878
B	M4 x 8 mm socket pin serrated washer head screw	4 510-1005	510-2005	510-2005
C	4 mm allen wrench	1 560-9646	560-9646	560-9646

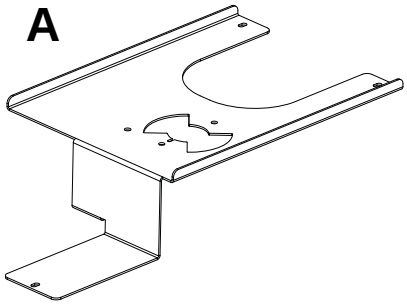



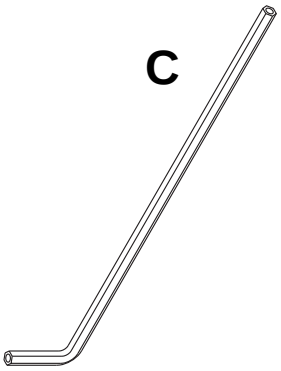

Note: Actual parts may appear slightly different than illustrated.

1 *Notch indicates front of projector. Attach adapter plate (**A**) to projector using four M4 x 8 mm socket pin serrated washer head screws (**B**). Tighten using 4 mm allen wrench (**C**).

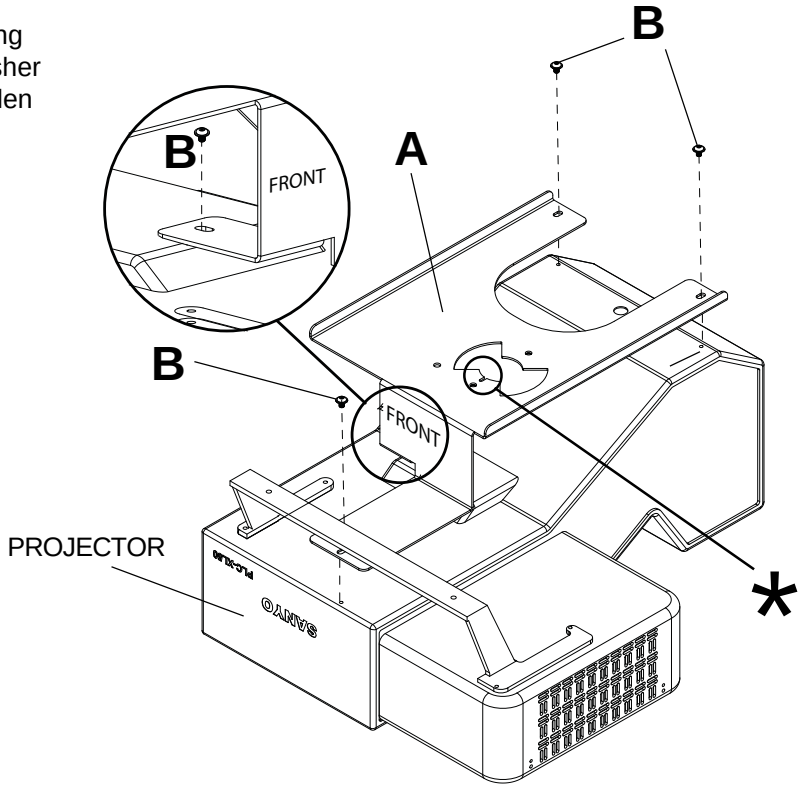

Visit the Peerless Web Site at www.peerlessmounts.com For customer care call 1-800-729-0307 or 708-865-8870.

© 2008 Peerless Industries, Inc. All rights reserved.
Peerless is a registered trademark of Peerless Industries, Inc.